



# NICEM CUTLERY POLISHER

SUPPLIED BY THE CUTLERY POLISHER COMPANY LTD

## 5 SIMPLE STEPS TO PERFECT CUTLERY

**IMPORTANT: Cutlery must not be allowed to dry before polishing!**

### 1. Turn the machine on 25 minutes prior to use to heat up the grain

IT IS IMPORTANT THAT THE GRAIN IS DRY AND WARM TO ABSORB ALL OF THE WATER FROM THE WET CUTLERY.

### 2. Place handfuls of your freshly washed & wet cutlery into the polisher

OR YOU CAN DROP YOUR WASHED CUTLERY INTO A BUCKET OF WATER TO STOP IT FROM DRYING & PLACE IT IN THE POLISHER WHEN YOU ARE READY.

### 3. Repeat this process until your basket of wet cutlery is empty

8-10 PIECES OF CUTLERY SHOULD BE PUT IN & ONCE EMERGED INTO THE GRAIN, ANOTHER 8-10 PIECES.

### 4. Leave the machine running for at least 25 minutes to dry the grain

USE A SOFT DAMP CLOTH & WIPE OVER INTERNALLY & EXTERNALLY. THIS ENSURES THAT POLISHED CUTLERY REMAINS DUST FREE.

### 5. At the end of the day, lift up the lid & wipe over to remove any dust

LEAVING THE MACHINE ON ENSURES THAT THE GRAIN IS DRY AND READY FOR THE NEXT DAYS USE OF THE POLISHER.

### REMEMBER:

- CUTLERY MUST NOT BE ALLOWED TO DRY BEFORE POLISHING
- PLEASE SEE REVERSE FOR OUR PROBLEM SOLVER
  - YOUR UV LIGHT MUST BE WORKING AT ALL TIMES.
- GRAIN MUST BE CHANGED EVERY MONTH!
  - CHANGE YOUR GRAIN BY VACUUMING OUT THE CURRENT GRAIN AND REPLACING WITH A NEW BAG.

### CONTACT:

T: 01474 873 892

W: [www.thecutlerypolisher.co.uk](http://www.thecutlerypolisher.co.uk)

E: [info@thecutlerypolisher.co.uk](mailto:info@thecutlerypolisher.co.uk)



The Cutlery  
Polisher  
Company Ltd

# CUTLERY POLISHER PROBLEM SOLVER

THE POLISHER WILL WORK PERFECTLY IF THE FOLLOWING STATEMENTS ARE TRUE;

- 1. The cutlery entering the polisher is clean and wet*
- 2. The cutlery was not allowed to dry before polishing*

