



NICEM CUTLERY POLISHER

SUPPLIED BY THE CUTLERY POLISHER COMPANY LTD

IMPORTANT:
DAILY, CHECK THAT THERE IS A BLUE LIGHT EMITTING FROM THE CUTLERY EXIT CHUTE. IF YOU CANT SEE A LIGHT, CONTACT US.

COVID-19 WALL CHART

- ✓ YOUR POLISHER HAS A UV-C GERMICIDAL LAMP SYSTEM WHICH KILLS COVID-19. ENSURE IT IS WORKING AT ALL TIMES!
- ✓ USE GLOVES & FACE MASKS WHEN HANDLING CUTLERY TO REDUCE THE RISK OF CONTAMINATION
- ✓ CHANGE YOUR POLISHING GRAIN EVERY MONTH!

THESE GUIDELINES ENSURE SAFEST POSSIBLE RESULTS ARE OBTAINED

REMEMBER: Turn the machine on 20 mins prior to use to heat up the grain and leave on for 20 mins at the end of the day to dry grain.

- 1:** As the used cutlery returns to the kitchen, place into a vessel of water to start breaking down the grease. Add a splash of detergent into this vessel for even better results.
- 2:** Place no more than 90 pieces of cutlery into a dishwasher basket and then put through the dishwasher. More than 90 pieces increases risk, some pieces may not get washed properly.
- 3:** Once washed, using gloves and a face mask, immediately remove the washed, wet cutlery from the dishwasher basket and place into the polisher. Place handfuls of 8 pieces at a time continuously. Do not allow the cutlery to dry, if it does, re-wash it as re-wetting does not work!
- 4:** Once polished, using gloves & a face mask, take the cutlery and wrap it or give it directly to the customer.

... ANY USER ISSUES, PLEASE TAKE A LOOK AT THE PROBLEM SOLVER ON THE FLIP SIDE OR CALL 01474 873 892 ...

CUTLERY POLISHER PROBLEM SOLVER

The polisher will work perfectly if the following statements are true;

1. The cutlery entering the polisher is clean and wet
2. The cutlery was not allowed to dry before polishing

