



The Cutlery Polisher Company Ltd

Ensure Your UV
light is working at all
times. This needs to
be changed once per
year to keep grain
clean!



4 EASY STEPS TO PERFECT CUTLERY

STEP 1 | Switch on and allow 25 minutes for it to warm up

STEP 2 | Take washed **wet** cutlery and place handfuls of 6-10 pieces in the polisher, repeat this process until the dishwasher basket is empty

IMPORTANT; NEVER ALLOW THE CUTLERY TO DRY, IF IT DOES, WASH IT AGAIN. REWETTING WON'T WORK! *(You can keep cutlery in soak after washing).*

STEP 3 | At the end of the day, lift the lid and wipe over surfaces with a damp cloth

STEP 4 | Leave the polisher running for 25 minutes at the end of the shift to dry the grain

REMEMBER; Change your grain once a month



The Cutlery
Polisher
Company Ltd

PROBLEM SOLVER

REMEMBER: Change Your Polishing Grain Every Month!

**IMPORTANT: Cutlery must not be allowed to dry after washing.
If it has dried, you must rewash the cutlery, rewetting will not work.**

POOR RESULTS

